

# Mbira Building Instructions

## Parts List

### Frame ( $\frac{1}{2}$ x $\frac{3}{4}$ " )

2 - 6" pine

1 - 2  $\frac{1}{2}$ "

1 - 3  $\frac{1}{2}$ "

### Top & Bottom ( $\frac{1}{8}$ " Masonite)

$\frac{1}{4}$ " dowel

$\frac{1}{2}$ " dowel

2 - screws & nuts


22 -  $\frac{5}{8}$ " brads

6 - metal tines

1. Nail bottom to frame



2. Attach  $\frac{1}{2}$ " dowel to top (leave loose) 3. Nail top to frame 4. Glue  $\frac{1}{4}$ " dowel to top

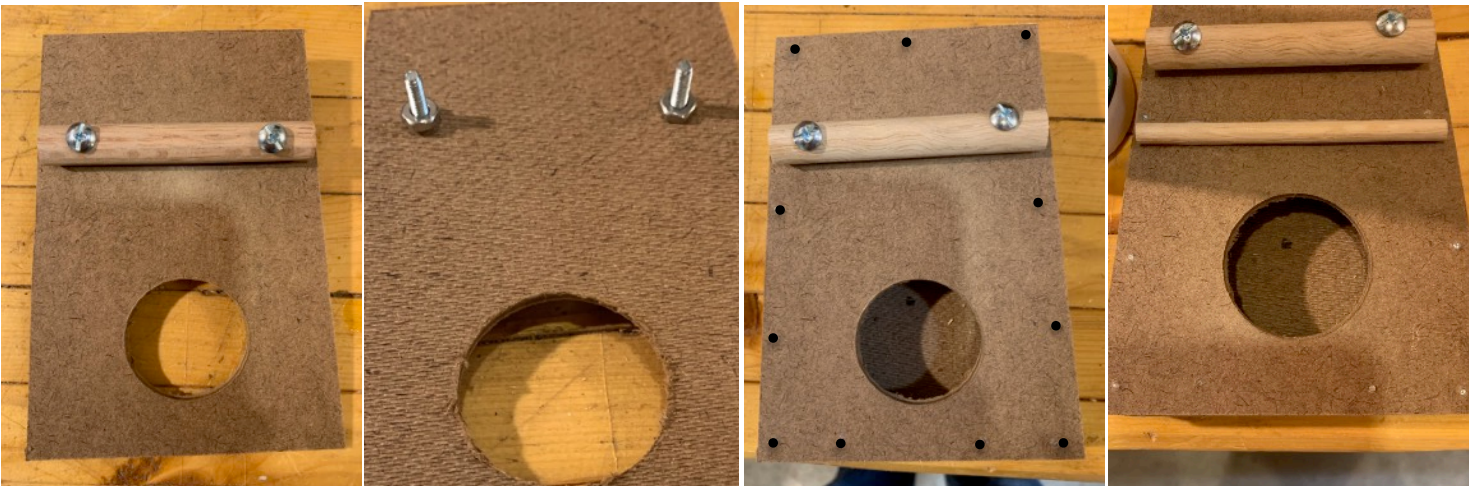

5. Slide tines in one at a time from top, under  $\frac{1}{2}$ " dowel and over  $\frac{1}{4}$ " dowel
6. Tighten some more (so tines stay put)
7. Tune the tines (see other sheet)
8. Tighten all the way (but do not over tighten)
9. Play!

